

NEW JESSEY STATE PLANE COORDINATE GRID LINES SHOWN AT 1000 POOT INTERVALS.

UTM GRID TICKS, ZONE 18, SHOWN AT 200 METER INTERVALS.

LATITUDE AND LONGITUDE TICKS SHOWN AT 30 SECOND INTERVALS.

WARE CREEK PORT NORRIS